

# SCREEN DOOR Installation Instructions

**Feather River**  
DOORS  
by TRINITY GLASS

**TRINITY GLASS**  
INTERNATIONAL

## PARTS INCLUDED


- One Screen Door
- One Header Track
- One Side Track

## TOOLS NEEDED

- #2 Phillips Screwdriver
- Flat Blade Screwdriver
- Utility Knife
- Hacksaw
- Safety Glasses

## One Plastic bag containing:

- 12 - #6 x 1" panhead screws
- 2 - #6 x 3/4" flathead screws
- 1 - #6 x 3/8" flathead screws
- Interior handle
- Exterior handle
- Install instructions

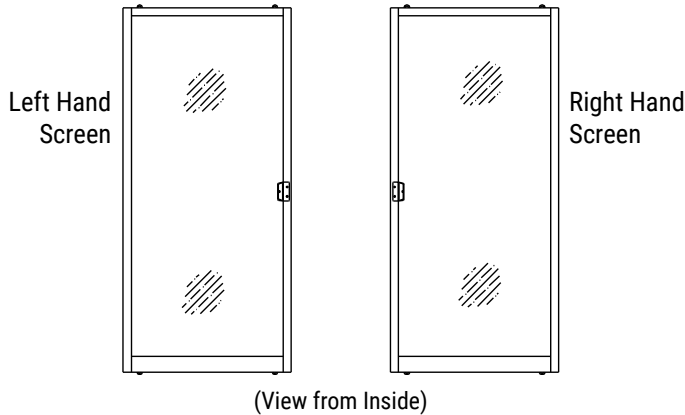


## INSTALLATION:

**1** Install the handle at pre-drilled location. Interior handle is the one with two mounting screws.


**2** Cut the header tracks to size with a hacksaw. For the header tracks that are installed onto a jamb, score the upper flanges with utility knife and break the flanges as shown below.

Figures below show header track installation for a french door (where 2 screen door kits are required). Double or triple patio door unit with one swinging door require just one header track mounted for the outer track.

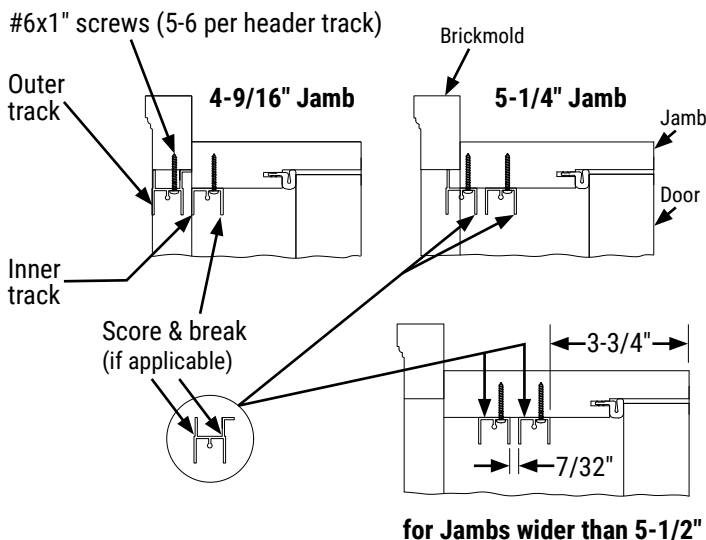


**3** Cut the side tracks (c-channels) to size with a hacksaw. Align each side track to header track and sill track. Install side tracks using 5-6 #6x1" screws per track.

For a french door (shown at right), install the side tracks to side jambs (for 4-9/16" jamb unit, the outer side track is installed to the side brickmold). For a triple-unit french door or a french door with double sidelites, depending on the configuration, the outer side track is installed to a mullion cap or a side jamb (brickmold for 4-9/16" jamb unit).

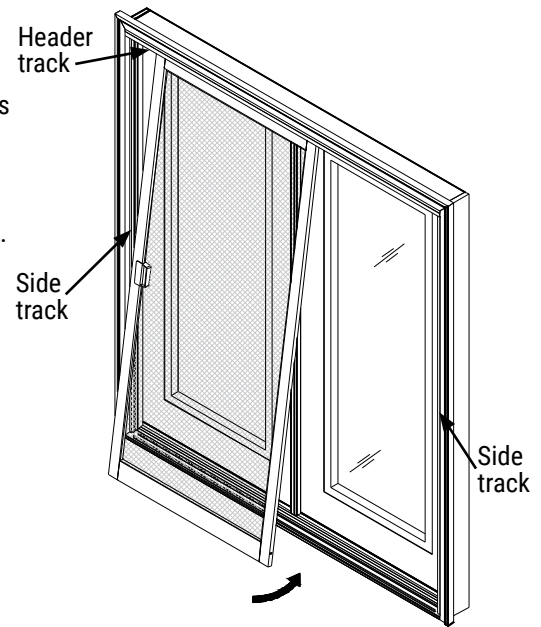


NOTE: For Jamb widths between 4-9/16" and 5-1/2", add a 1/2" x 1" Spacer (not supplied) to the vertical Brickmold edge. This will fill the gap between the C-Channel and the Brickmold. The Spacer provides secure mounting for the C-Channel screws. (shown at right)

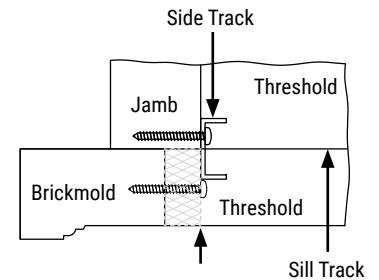

For a double patio unit with one swinging door, one side track is installed to a jamb (brickmold for 4-9/16" jamb unit). For triple patio unit with one swinging door, depending on the configuration, side track may be installed on a mullion cap or a side jamb (brickmold for 4-9/16" jamb unit). For the above patio units with single swinging door, screen door is installed on the outer track.

**4** For each screen door, install the top end of the screen door to the header track as shown above. Then position the bottom end of the screen to the sill track. Make sure that the bug seal is facing the interior side.

**5** Raise and level the screen door about 1/8" off the sill by adjusting the bottom rollers as shown in the figure at right. Do not over-tighten the screw. When screen doors are installed, make sure that bug seals are making a good seal at mullion or with inner screen door in case of a french door.

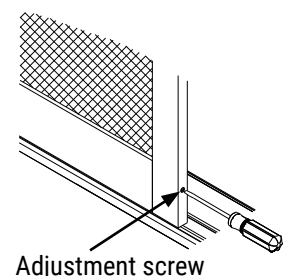

Visite nuestra página web para esta información en español.  
[featherriverdoors.com](http://featherriverdoors.com)